

Sortimo TopSystem Ford Transit Custom H1 L1/L2 1000021190 / FOCU23 L1L2 H1-3P

da-DK

Vigtigt! Læs og forstå den vedlagte sikkerhedsbrochure.

de-DE

Wichtig! Lesen und verstehen Sie die beiliegende Sicherheitsbrochure.

en-EN

Important! Read and ensure that you have understood the enclosed safety brochure.

es-ES

¡Importante! Asegúrese de leer y entender el folleto de seguridad adjunto.

fr-FR

Important ! Lisez attentivement la brochure de sécurité ci-jointe pour bien la comprendre.

no-NO

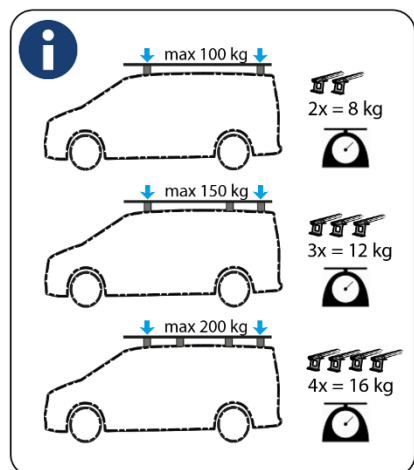
Viktig! Les og forstå den vedlagte sikkerhetsbrosjyren.








nl-NL


Belangrijk: Zorg ervoor dat u de bijgevoegde veiligheidsbrochure hebt gelezen en begrepen.







sv-SE

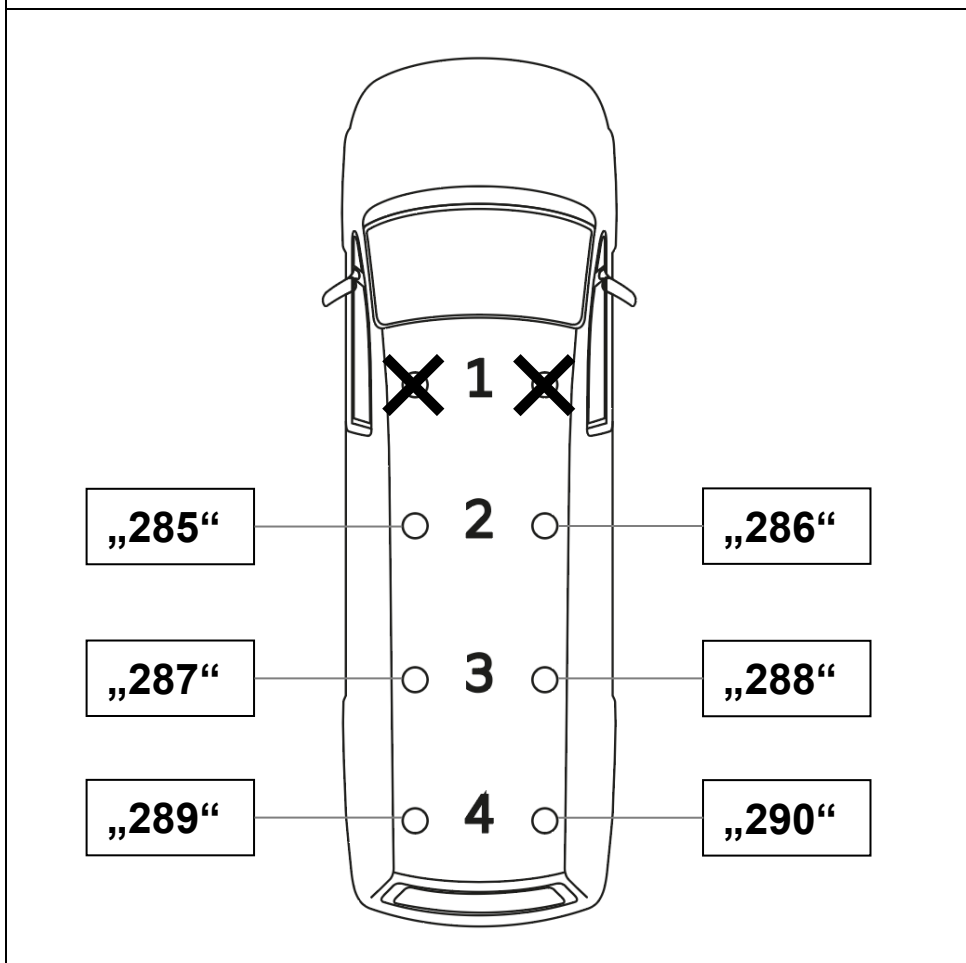
Viktigt! Se till att läsa och förstå den bifogade säkerhetsbroschyren.

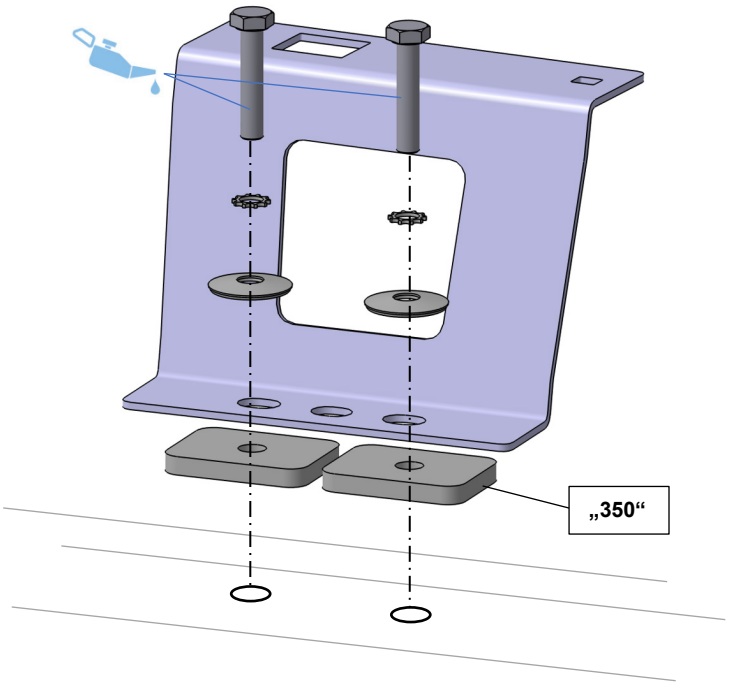



1000021190		
6x 2000017725 	6x 6000003535 M6x16 	6x 6000003960 Ø 18 / Ø 6,4 
6x MT1016364 M6 	1x 2000019378 "285" 	1x 2000019380 "286" 
1x 2000019398 "287" 	1x 2000019396 "288" 	1x 2000019394 "289" 
1x 2000019392 "290" 	12x 6000003644 M8x25 	12x 6000003942 M8 
12x 6000011036 Ø 22 / Ø 8,4 	12x 6000004031 "350" 	

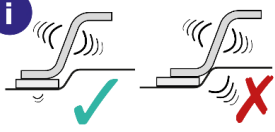
		
		
		
		

1	2000019378 "285"		2000019380 "286"		2000019398 "287"	
	2000019396 "288"		2000019394 "289"		2000019392 "290"	

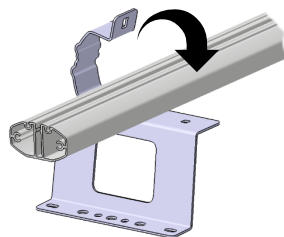
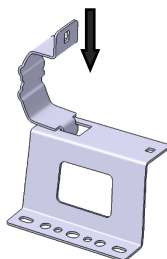



2	M8x25 12 Nm 	M8 	Ø 22 / Ø 8,4 
			„350“ 

i

3



3.1

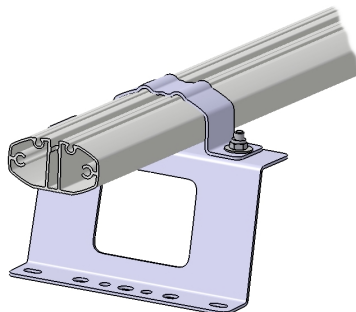
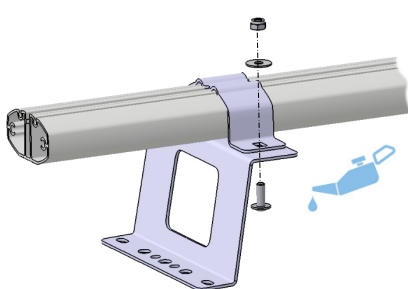
M6x16



Ø 18 / Ø 6,4

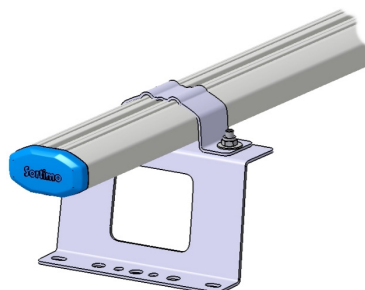
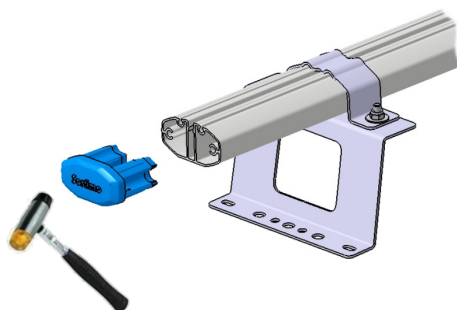


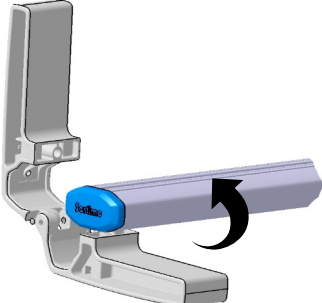
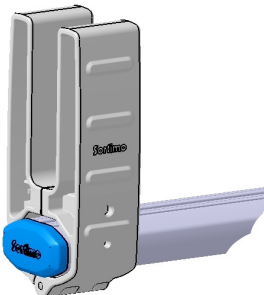
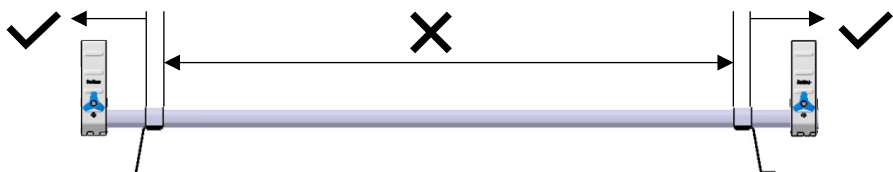
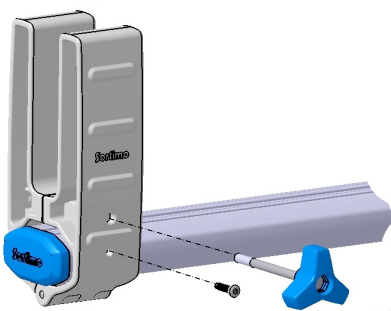
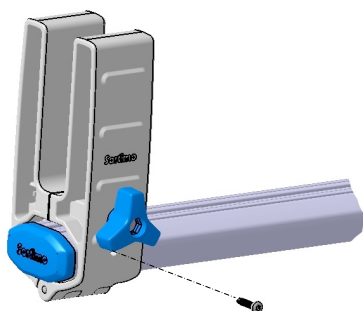
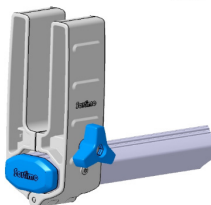
M6
8 Nm

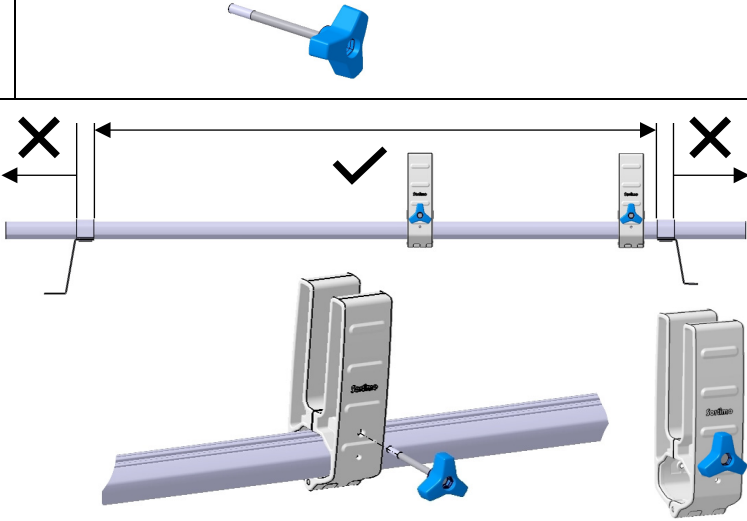
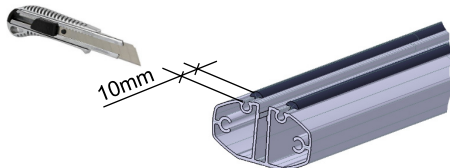


4

6000003819



5	6000015343 
 	
5.1	M4,2x19 4 Nm  
   	

5.2		
6		
		
6.1	6000011073 M6x16 6 Nm 	
